

On vehicle adjustments

1. Drag-link adjustment
 - A. Remove the drag link from the pitman arm.
 - B. Center the steering gear.
 1. Refer to sector shaft adjustment
 - C. Set the front steering tires straight ahead.
 - D. Adjust the drag-link to the pitman arm without moving the pitman arm.

