

## Flushing the steering system

1. Lift front wheels off the ground.
2. Disconnect the return line from the reservoir. Put in a container and plug off the reservoir.
3. Disengage the ignition.
4. Engage starter while turning wheels from left to right.
5. Do not allow the reservoir to run out of fluid.
6. Reattach return line to reservoir.
7. Recheck fluid level.